

Aygo Quick Guide.

Petrol flap is on left hand side. To open, pull lever just in front of inside of drivers door.

To **open the bonnet**, pull lever on left hand side just in front of front passenger door.

Only 2 seat belts on back seat – can only **carry 4 people**.

Tyre pressures: 33 PSI = 2.3 kg/cm²

As well as sliding the seat back or forward and adjusting the angle, there is a lever on the right side of the driver's seat to adjust the **height of the seat** up or down.

To **fold the rear seats** down you need to open the boot, pull the strap on the left respectively right side and then push the corresponding seat down.

There is a lever just under the **steering wheel to adjust it** up or down.

The two **buttons on the main display** can be used to scroll backwards or forwards to get various kinds of information. Includes approximate range the fuel in the tank will cover. Should be left on “ODO” = odometer, so we can see total miles travelled for trip sheet. Press button in for a few seconds to reset the option you are on.

Switching off **airbag**: switch is inside glove compartment and needs to use the key. Display show status. Should only be turned off when certain kinds of child restraint system (child) seat) are installed on front seat. For which kinds – see User Guide page 13. The User Guide also recommends child seats on back seat as more safe. And it explains how to install different kinds of child seats on back seat as well.

On back doors, there is a switch on the rear edge of the door, which you will see if you open the door, and can be used to make it “**child safe**” - i.e. when switch is down a child cannot open the door.

For more information see **User's Guide** in the glove compartment.